



**RADIUS POWER - MCI
TRANSFORMER CROSS REFERENCE**

XXX	-10 , -12, -16, -20, -24, -28, -36, -48, -56, -120
YYY	-10, -12, -16, -20, -24, -28, -34, -40, -56, -88, -120, -180, -230

RADIUS	MCI	RADIUS	MCI	RADIUS	MCI
RP95-06-2012	4-06-6607				
RP95-06-3020	4-06-6315	RP97-03S-1-YYY	4-03-1-YYY	RP91-52-0050	4-52-0050
RP95-07-4024C	4-07-7610	RP97-03S-2-YYY	4-03-2-YYY	RP91-52-0100	4-52-0100
RP95-07-4024CT	2-51-4024	RP97-03S-3-YYY	4-03-3-YYY	RP91-52-0250	4-52-0250
RP95-07-6024C	4-06-7619	RP97-03S-4-YYY	4-03-4-YYY	RP91-52-0500	4-52-0500
RP95-07-6024CT	4-06-7649	RP97-03S-5-YYY	4-03-5-YYY	RP91-52-1000	4-52-1000
RP95-08-8024	2-30-1982			RP91-52-2000	4-52-2000
RP95-09-8024T	2-51-7024				
RP96-1S-2-XXX	4-01-2-XXX	RP97-04S-1-YYY	4-04-1-YYY		
RP96-1S-3-XXX	4-01-3-XXX	RP97-04S-2-YYY	4-04-2-YYY		
RP96-1S-4-XXX	4-01-4-XXX	RP97-04S-3-YYY	4-04-3-YYY		
RP96-1S-5-XXX	4-01-5-XXX	RP97-04S-4-YYY	4-04-4-YYY		
RP96-1S-6-XXX	4-01-6-XXX	RP97-04S-5-YYY	4-04-5-YYY		
RP96-1S-7-XXX	4-01-7-XXX				
RP96-2S-2-XXX	4-02-2-XXX				
RP96-2S-3-XXX	4-02-3-XXX	RP99-41-2-XXX	4-41-2-XXX		
RP96-2S-4-XXX	4-02-4-XXX	RP99-41-3-XXX	4-41-3-XXX		
RP96-2S-5-XXX	4-02-5-XXX	RP99-41-4-XXX	4-41-4-XXX		
RP96-2S-6-XXX	4-02-6-XXX	RP99-41-5-XXX	4-41-5-XXX		
RP96-2S-7-XXX	4-02-7-XXX				
RP98-06-3-XXX	4-06-3-XXX	RP99-42-2-XXX	4-42-2-XXX		
RP98-06-4-XXX	4-06-4-XXX	RP99-42-3-XXX	4-42-3-XXX		
RP98-06-5-XXX	4-06-5-XXX	RP99-42-4-XXX	4-42-4-XXX		
RP98-06-6-XXX	4-06-6-XXX	RP99-42-5-XXX	4-42-5-XXX		
RP98-06-7-XXX	4-06-7-XXX				
RP98-06-8-XXX	4-06-8-XXX				
RP98-07-4-XXX	4-07-4-XXX				
RP98-07-5-XXX	4-07-5-XXX				
RP98-07-6-XXX	4-07-6-XXX				
RP98-07-7-XXX	4-07-7-XXX				
RP98-07-8-XXX	4-07-8-XXX				